



2021-09
WEB BASED APP KEYPAD



WEB KEYPAD APP / WEBBKEYPAD APP

USE LUBE-MASTER FROM AN INTERNET CAPABLE DEVICE /
ANVÄND LUBE-MASTER FRÅN EN INTERNETKAPABEL ENHET

MANUFACTURING AND DEVELOPMENT WITH THE LATEST TECHNOLOGY

 www.eurolube.com



Enables increased flexibility, mobility and efficiency by initiating LUBE-Master dispenses from a web capable device such as a smartphone, tablet or computer web browser. Using the web app keypad enables a workshop to omit installing regular keypads and only use the own internal IT components, regardless of platform, to perform fluid dispensing operations using LUBE-Master.

Easy set up

- A driver is added to the LUBE-Master engine which communicates with our central WebKeypad Server
- Users and administrators are set up on our WebKeypad Server
- Any devices required to access the system are configured

How it works

When everything is configured the workflow is identical as when using regular keypads, such as selecting the reel, entering the PIN and workorder number and finally the volume to be dispensed.

Built-in bar code scanner

The web app keypad features a built-in software based scanner for inputting work order numbers via QR codes or conventional bar codes.

Drivers for external ERP/DMS systems

Works with all OCP 1.xx based drivers for real-time validating of work order numbers in an ERP/DMS system.

Subscription based

The web app keypad is offered as-a-service with a monthly fee (invoiced annually), this provides your business to easily scale up or down depending on the current needs, and also a better overview of the costs. Free support is included for customers with existing LUBE-Master support agreements.



Möjliggör ökad flexibilitet, mobilitet och effektivitet genom att starta tappningar i LUBE-Master från en webbkapabel enhet t.ex smartphone, surfplatta eller dator. Genom att använda den webbaserade terminalen kan en verkstad utesluta att installera traditionella knappsatser och istället använda intern IT-utrustning, oavsett plattform, för att utföra tappningar med LUBE-Master.

Enkel installation

- En koppling läggs till i LUBE-Master Engine som kommunicerar med vår centrala WebKeypad-server.
- Användar- samt administratörskonton sätts upp på vår WebKeypad-server.
- Alla enheter som skall användas för att aktivera systemet konfigureras

Så fungerar det

När allting är konfigurerat så är arbetssättet identiskt som när traditionella knappsatser används. Först väljs tappställe, sedan matas PIN-kod och arbetsordernummer in och till sist volymen som ska tappas.

Inbyggd streckkodsläsare


Den webbaserade terminalen använder enhetens kamera för inmatning av arbetsorder via QR-koder eller vanliga streckkoder.

Koppling till externa affärssystem

Fungerar med alla befintliga OCP 1.xx-baserade kopplingar för validering av arbetsordernummer i realtid mot ett affärssystem.

Prenumerationsmodell

Den webbaserade terminalen erbjuds som en tjänst med månadskostnad (faktureras årsvis), vilket ger din verksamhet möjlighet på ett enkelt sätt skala upp eller ner beroende på behov samt få kontroll på dina kostnader. Support ingår utan extra kostnad för våra kunder som har supportavtal för LUBE-Master.

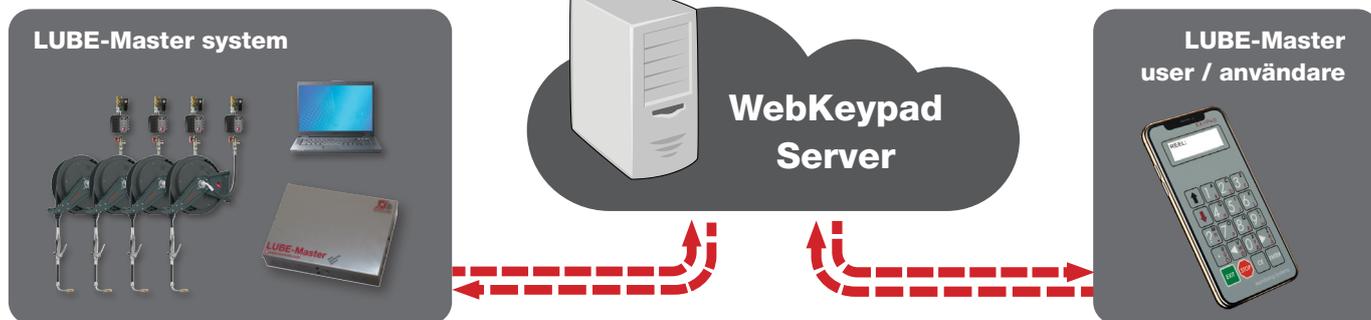

SYSTEM REQUIREMENTS / SYSTEMKRAV	53432
Required LUBE-Master version / LUBE-Master minium version	R10
Device requiments / enhetskrav	HTML5 capable web browser and internet connectivity, camera (if the scanner feature will be used) / HTML5-kompatibel webbläsare och internetanslutning, kamera (om scannerfunktionen ska användas)



EUROLUBE EQUIPMENT

by Alentec & Orion AB, Grustagsvägen 4, SE-138 40 Älta, Sweden

EMAIL eurolube@alentec.se PHONE +46 (0)8-747 67 10

www.eurolube.com